



NOTE: Every R/O system will not look like this. Each system will vary.

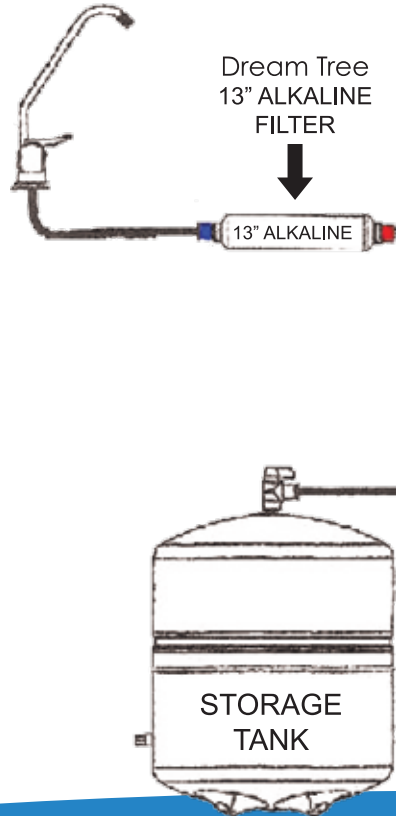

Installing your Dream Tree Family Alkaline Filter

1. Turn off your water.
2. Cut the tubing after the last filter and before the spout.
3. Connect tube coming from the last filter to the Dream Tree Alkaline filter on the red side.
4. Then connect tubing coming from spout to the blue side of your Dream Tree Alkaline filter.

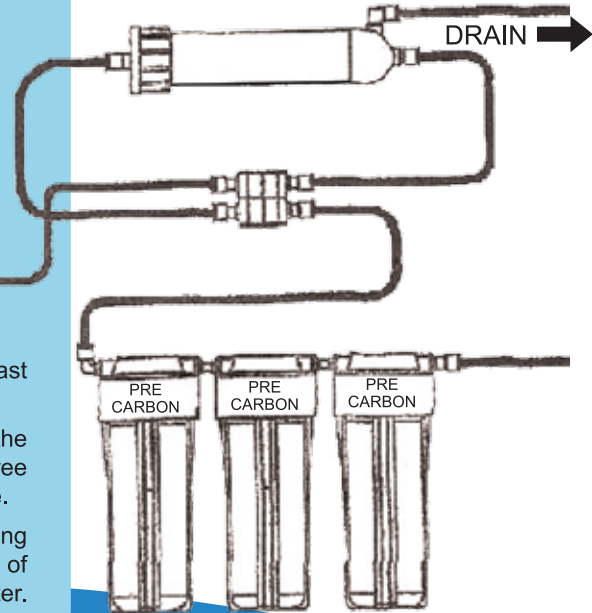

Dream Tree Family

Tel: 713.988.8833 • Fax: 713.988.8839 • E-mail: support@DreamTreeFamily.com